


BRACKET DIAGRAM

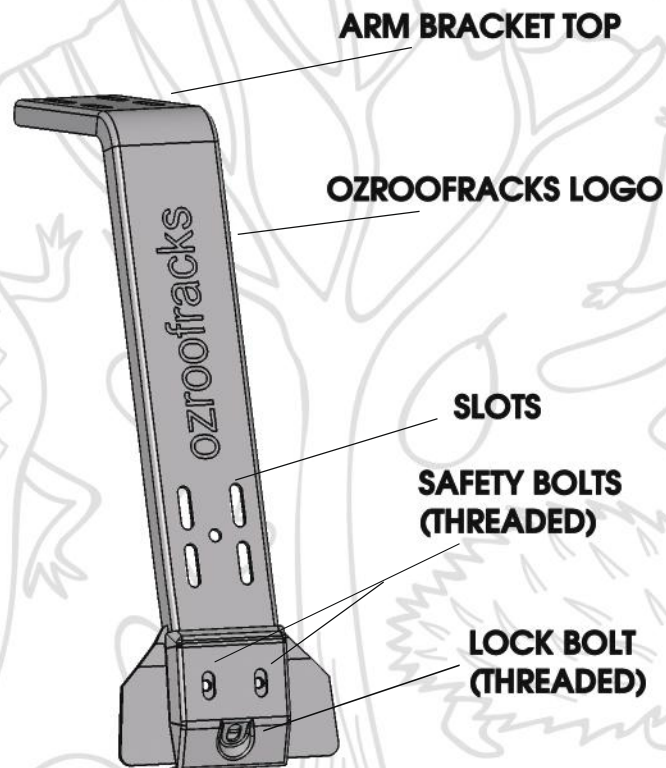

WARRANTIES

This product has been manufactured following the Australian Consumer Law (ACL) guidance on the consumer guarantee as to acceptable quality, durability and safety. It is distributed with a limited lifetime warranty of 1 year (not applicable for general wear and tear to external coating and finishes, discolouration, dents and colour breakdown over extended time or use).

Even when the brackets are examined for imperfections if you consider that it is faulty, under the consumer guarantees, you can opt for a refund while the product hasn't been used and you keep the original package with the proof of purchase.

We have manufactured a limited number of these brackets hence we can't assure a replacement will be available in the future.

PRODUCT SPECIFICATIONS

Use: High roof low gutter Mount
roof rack brackets
Length: 44 cms
Material: powder coated steel
Color: black
Weight: 1.7kgs/bracket
Manufactured: 06/2023

ozroofracks.com.au

*Images displayed only for illustration purposes.
Any other product and/or image copyright belong to their respective author and/or brand.

GUTTER MOUNT 44CM HIGH ROOF RACK BRACKETS
ozroofracks.com.au



ABN 12 928 238 010

33 Murrawal Rd Wyongah NSW 2259 · 0439 007 017


PRODUCT DESCRIPTION

This product is a gutter mount roof rack bracket. The bracket is to be fitted clamping the vehicle gutter using safety bolts to serve as a support for a crossbar, tray, platform or roof rack. Only for high roof vehicles with low gutter where you want to put luggage or cargo, hence hasn't been designed for vehicles without gutter, low roof or any other configuration.



PACKAGE CONTENT


6x HIGH ROOF RACK BRACKETS 44CM LENGHT
6x LOCK CAPS (ONE PER BRACKET)
6x LONG STAINLESS STEEL HEX SOCKET CAP HEAD SCREWS (LOCKERS)
6x RUBBER LINERS (TO FIT BETWEEN THE GUTTER AND THE BRACKET)
12x SHORT STAINLESS STEEL HEX SOCKET CAP HEAD SCREWS (SAFERS)
1x ALLEN KEY

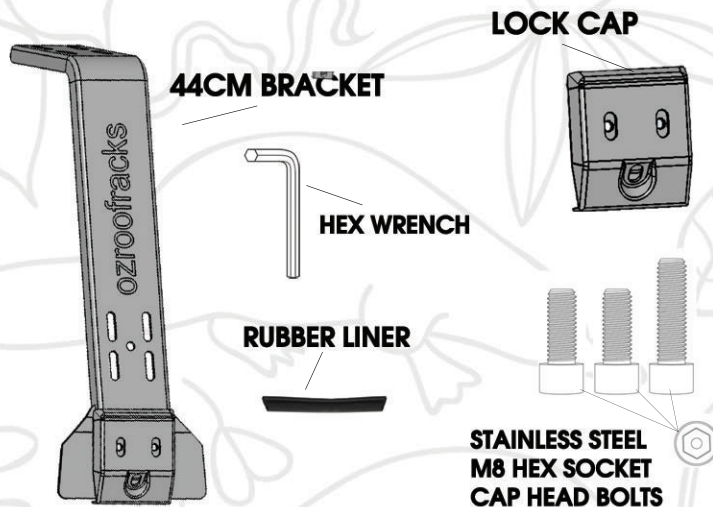

PRIOR TO INSTALLATION

01. Do not exceed the maximum roof loading rating of your vehicle (found in the owner manual). The mass of the brackets as any other accessories fitted, must be subtracted from the maximum loading capacity to determine actual payload capacity. One bracket weight is 1.7kg.
02. Check for any product defect or Imperfection.
03. Check any relevant state law/s.
04. Always use specialised carrier equipment for specific products like ladder rack, bike and kayak carriers.
05. Driving techniques should be altered when the vehicle roof rack is loaded: reducing speed and allowing for longer braking distances...
06. Make sure that the vehicle gutter is clean and in good condition. Inspect the surface carefully to make sure that is even and there are no external elements that might affect the contact between the bracket and the gutter later on.
07. Although one person is enough to install each bracket, we recommend a 2-person installation to avoid scratching the vehicle and/or dropping of the product.
08. It's highly recommend to place the vehicle in an open and empty area, under the shade, with enough light while keeping a safe distance from any person not involved in the installation and any animal/s which can be injured if the brackets falls during the installation.
09. Due to the nature of high roof vehicles, for a better installation it's recommended for each installer to use a ladder. This helps reach the vehicle gutter/roof properly, and to have better access when tightening the bolts or supporting the bracket.
010. Once installed, thoroughly check that all the brackets are secure before driving away.

INSTALLATION

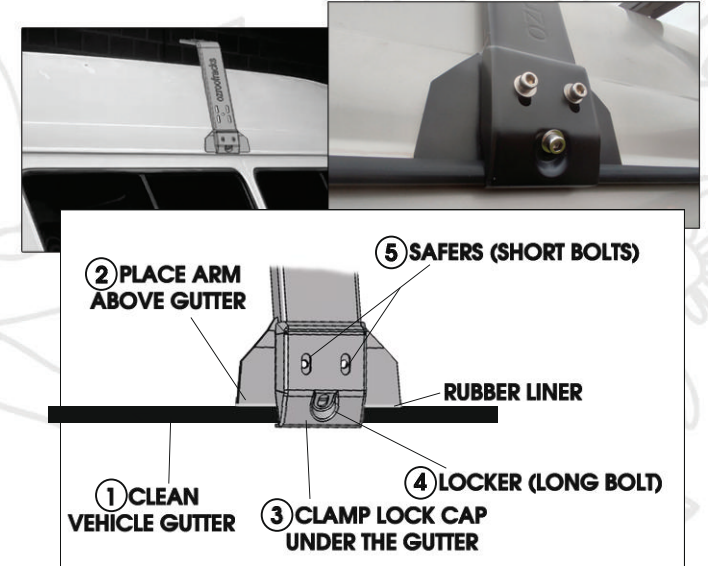

1. Make sure the gutter surface is clean and even.
2. Protect your gutter by fitting a rubber liner at the bottom of the bracket. Then place the bracket over the vehicle gutter and hold it avoiding contact with the van wall in a pseudo straight position.
3. Place the lock cap clamping the gutter (the short flat end of the cap must contact along and under the gutter)
4. Use the M8 hardware provided with the hex key and ALWAYS TIGHTEN FIRST the LOCK BOLT (long one) into the lower bolt hole threaded to secure the position.
4. AFTER securing the bracket through the locker long bolt, TIGHTEN the SAFETY BOLTS (short ones) into the safety top bolt holes threaded to secure the cap.

Repeat these steps to install as many brackets along the gutter as you may need for your cross bars or roof rack.